



RISER KIT FOR REAR RACK FOR USE WITH BMW R1200GSW WITH RALLYE SEAT


STANDARD INSTALLATION:

1. Remove OEM bolts.
2. For rear two holes stack 22.2mm spacer + 12.7mm spacer that comes with the rack.
3. For front two holes stack 22.2mm spacer + 11.1mm spacer that comes with the rack.
4. Install 60mm bolts, get all 4 started then tighten down.

INSTALLATION WITH HARD CASE SIDE RACKS:

1. Remove OEM bolts.
2. For rear two holes stack 22.2mm spacer + 12.7mm spacer that comes with the rack.
3. For front two holes stack 22.2mm spacer + 4.76mm spacer (on top pannier rack bracket).
4. Install 60mm bolts, get all 4 started then tighten down.

Tip! Tape spacers together first.

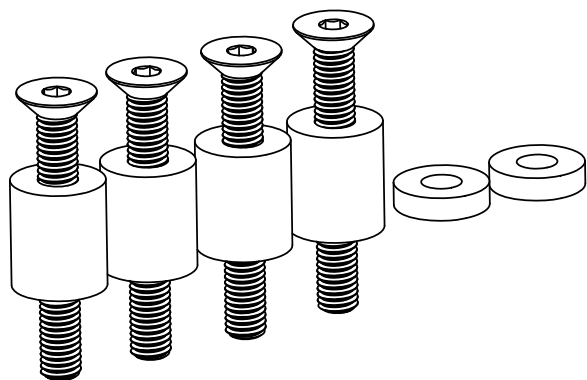

ITEM NO.	DESCRIPTION	QTY.
1	AL SPACER 8.11Dx22.2Lx19.05OD	4
2	M8 x 60 FHSCS STAINLESS	4
3	AL SPACER 8.11D X 4.76L X 19.05 OD	2

